




Thank you for buying a StreetWorks product. Be confident that it will provide the quality and performance that you demand for your car. **Please read and understand all installation instructions before beginning.** Planning and preparation will make the entire process easy and quick.

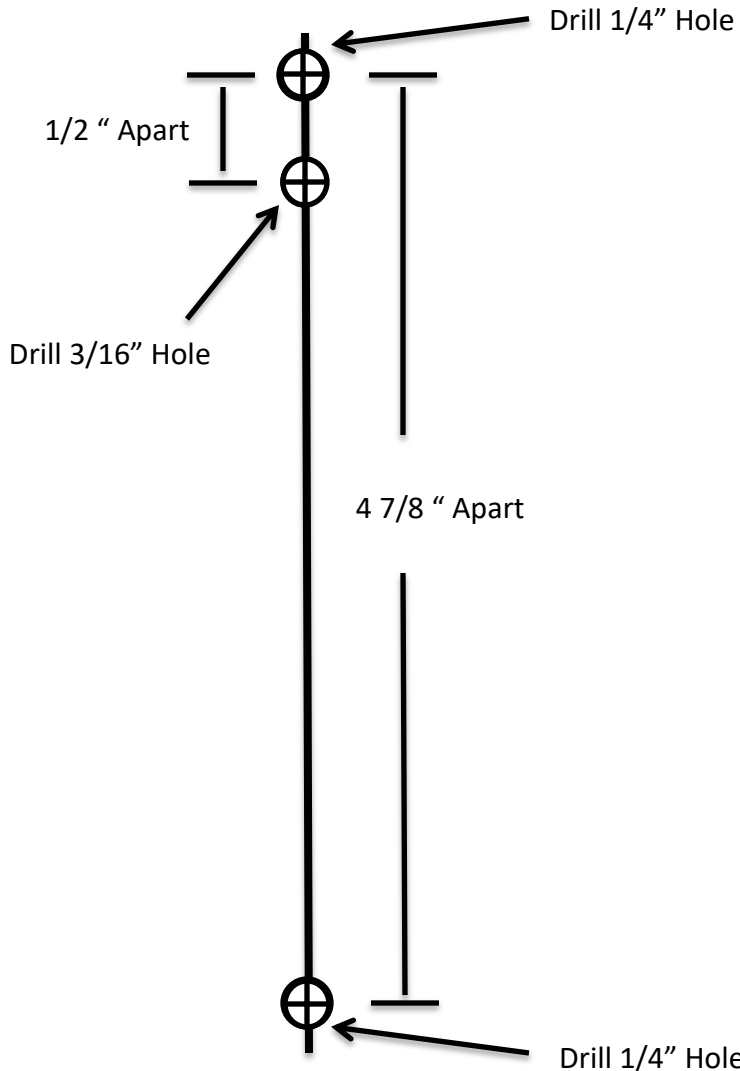

**EL-89 Series
Brushed / Polished Billet
Taillight / 3rd Brake Light**

Easily Mounted 3rd Super Bright Brake light. Simply mount and wire to your brake switch. Only 3 small holes need to be drilled.

****DISCONNECT ELECTRICAL POWER AT THE BATTERY BEFORE DOING ANY WIRING****

Determine a good location for the light where you can easily run the wires, and get to the mounting studs.

Follow the drill guide. Seal holes well with silicone.

Wire per the diagram below.

